

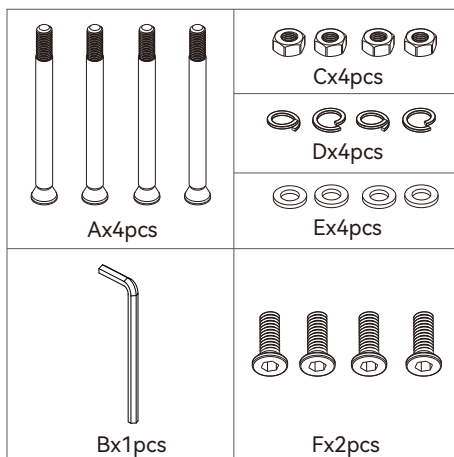



Installation instruction

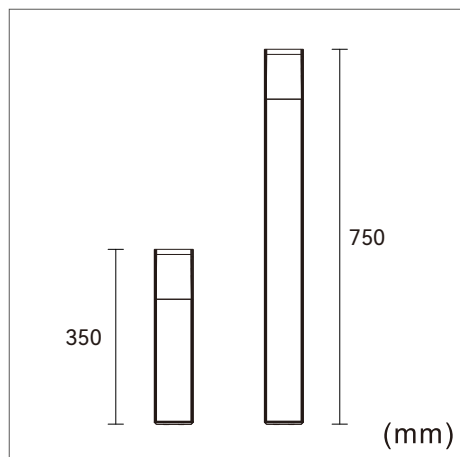


Accessories bag

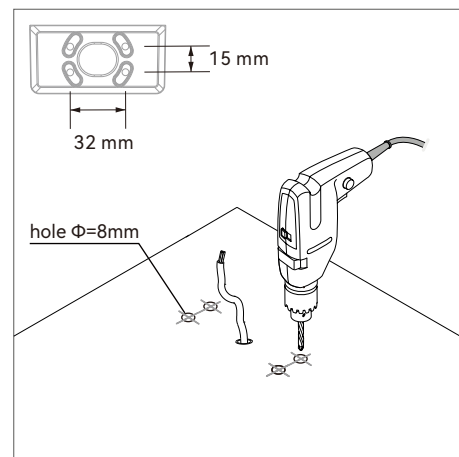


1. Drill four 8mm diameter anchor holes into the ground, each 60mm deep.

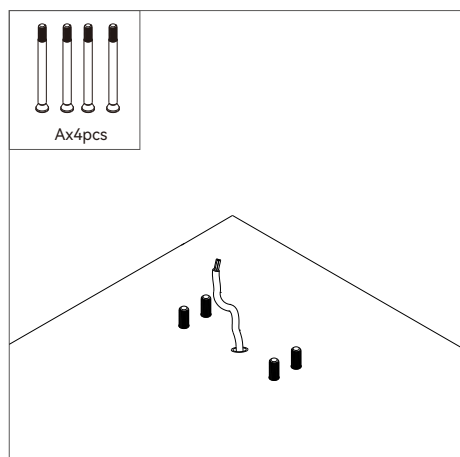


2. Insert the expansion screw to the holes

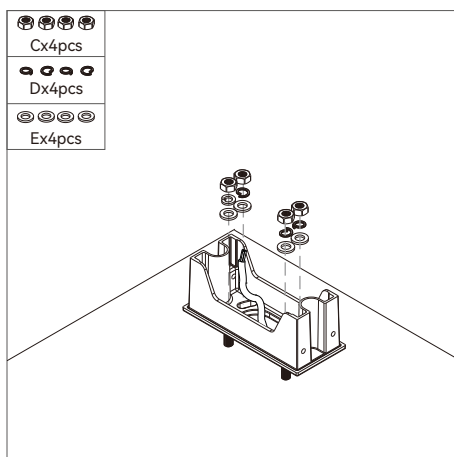


3. Fix the mounting plate

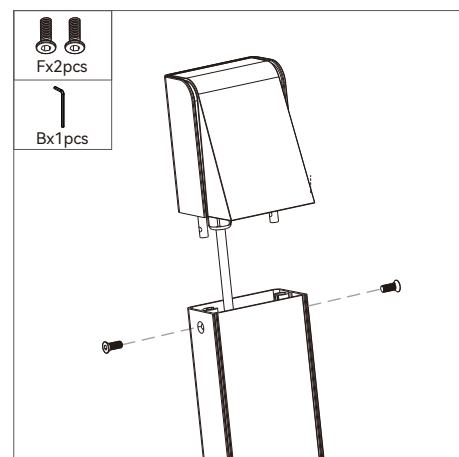

4. Fix the bollard head and bollard tube

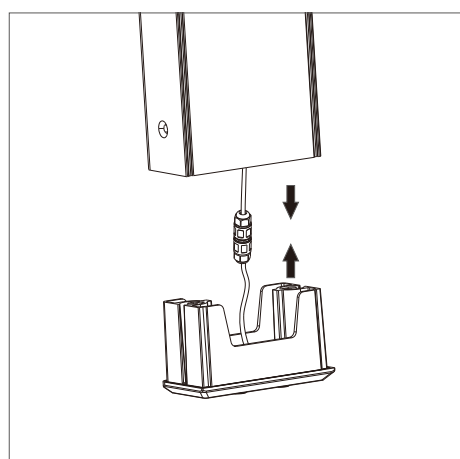

5. Connect the bollard wire to the electricity cable

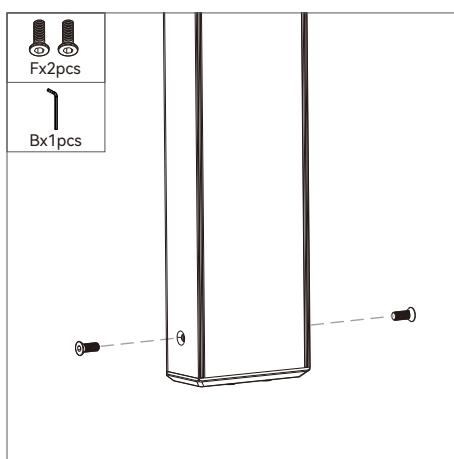

6. Fix the bollard tube onto the mounting base

